

## How to remove the face plate for installation:



1



- Place unit on firm surface
- With one hand press down on back of unit while gripping handle with other hand
- Pull handle down and away from back of unit.
- The face plate will snap away from the top edge and will pivot at the bottom.

2



- Install unit using appropriate screws through the back of unit.
- Position bottom slots on face plate over tabs on base unit.

3



- Pivot face plate up and snap top in place.

